

PARKER JOTTER BALL PENS

To change refills, simply unscrew the barrel from the cap. Remove the old refill. Insert a new refill. Screw cap and barrel back together.



PARKER WRITEFINE MECHANICAL PENCIL

To load your pencil, first make sure old lead is ejected by turning cap clockwise until mechanism comes to a stop. Then turn cap counter-clockwise until same action

occurs. Insert new lead into tip and push in. Turn cap clockwise until lead projects about $\frac{1}{8}$ ". Press point gently against paper to seat new lead.



A Statement of Quality


All Parker writing instruments are sold with the understanding that the Company agrees to correct, without charge, any defect in materials or workmanship revealed within one year of purchase.

A Word About Service


Should you wish a special adjustment on your Parker writing instrument to satisfy some personal writing requirement, your nearest Parker dealer or authorized service station will be most happy to help you. If a general refurbishing is necessary, you will be charged for labor and replacement parts.


 **PARKER FILLING INSTRUCTIONS**

- 1 These pens have slip-fit caps. Pull to remove.
- 2 Unscrew barrel.
- 3 Match your pen to one of the following pictures.

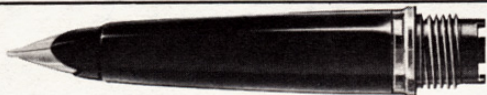

THE PARKER 45 FILLS TWO WAYS:

 
1.  Load with cartridge by inserting into point section—colored plug first. Push firmly until it seats itself. Replace barrel.

2.  Fill from bottle by inserting converter. Push firmly until you feel it seat itself. Insert point into ink, press ribbed bar four times. Replace barrel.




HOW TO LOAD THE PARKER TOUCHÉ II

 1. Twist and pull to uncap Tip & Ink cartridge.




2. Insert the cartridge, point first, into the front end of the pen shown above. Replace barrel.

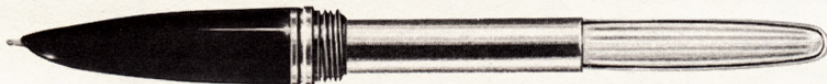

HOW TO FILL THE PARKER 51 or SUPER 21: Insert the point into an ink bottle. Press ribbed bar

of filler firmly four times. Withdraw pen, wipe off excess ink with tissue. Replace barrel.

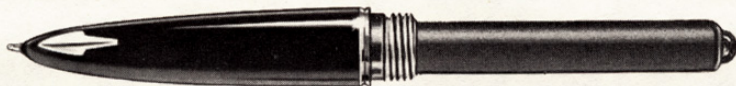

HOW TO FILL THE PARKER 61: This pen fills from the back—not the point end. Immerse the black filling tube into ink, count slowly to 30.

(Subsequent fillings will take only 10 seconds.) Remove from bottle slowly to let excess ink shed from filler. Replace barrel.